

A

B

C

D

E

F

KNOCK
CONTROL
MODULE
(GT)CRANKSHAFT
POSITION
SENSOR
(GT ONLY)BOOST
SENSOR
(GT ONLY)POWER STEERING
SOLENOID VALVE
(GT ONLY)RADIATOR
TEMP. SWITCH
(GT ONLY)

TO GROUND

12A581 C138

12A581 C142

12A581 C103

12A581 C179

12A581 C181

12A581 C117

12A581 C102

12A581 C211

12A581 C211

ENDS

TO 109543
ZONE 83-E

C308

1A	1C	1E	10	11	1W	10	10	15	1U
1B	1D	1F	1H	1J	1L	1M	1P	1R	1V

2A	2C	2E	20	21	2K	2M	20
2B	2D	2F	2H	2J	2L	2N	2P

3A	3C	3E	30	3U	3V	3Y
3B	3D	3F	3H	3L	3M	3P

ELECTRONIC CONTROL ASSEMBLY WITH 4EAT CONTROL (GL ONLY)
OR
ELECTRONIC CONTROL ASSEMBLY (GT ONLY)2.2L : GL
2.2L TURBO : GT--- : GT
- - - : CANADA