

IDLE SPEED
CONTROL
SOLENOID



AIR
CHARGE
TEMP.
SENSOR



THROTTLE
POSITION
SENSOR



VIP TEST
CONNECTOR



 
 
S.T.L.
TERMINAL



POWER
STEERING
PRESSURE
SWITCH





MAP SENSOR













ENGINE
COOLANT
TEMP.
SENSOR



  PRESSURE
FEEDBACK EGR



ENDS

          

TO GROUND



A/C
PRESSURE
PURGE
SOLENOID



CANISTER
PURGE
SOLENOID



EGR
SOLENOID



HEGO
SENSOR



VEHICLE
SPEED
SENSOR



WATER
TEMP.
SWITCH



LOW OIL
LEVEL
SENSOR



CAPACITOR



OIL
PRESSURE
SENSOR



WATER
TEMP.
SWITCH

