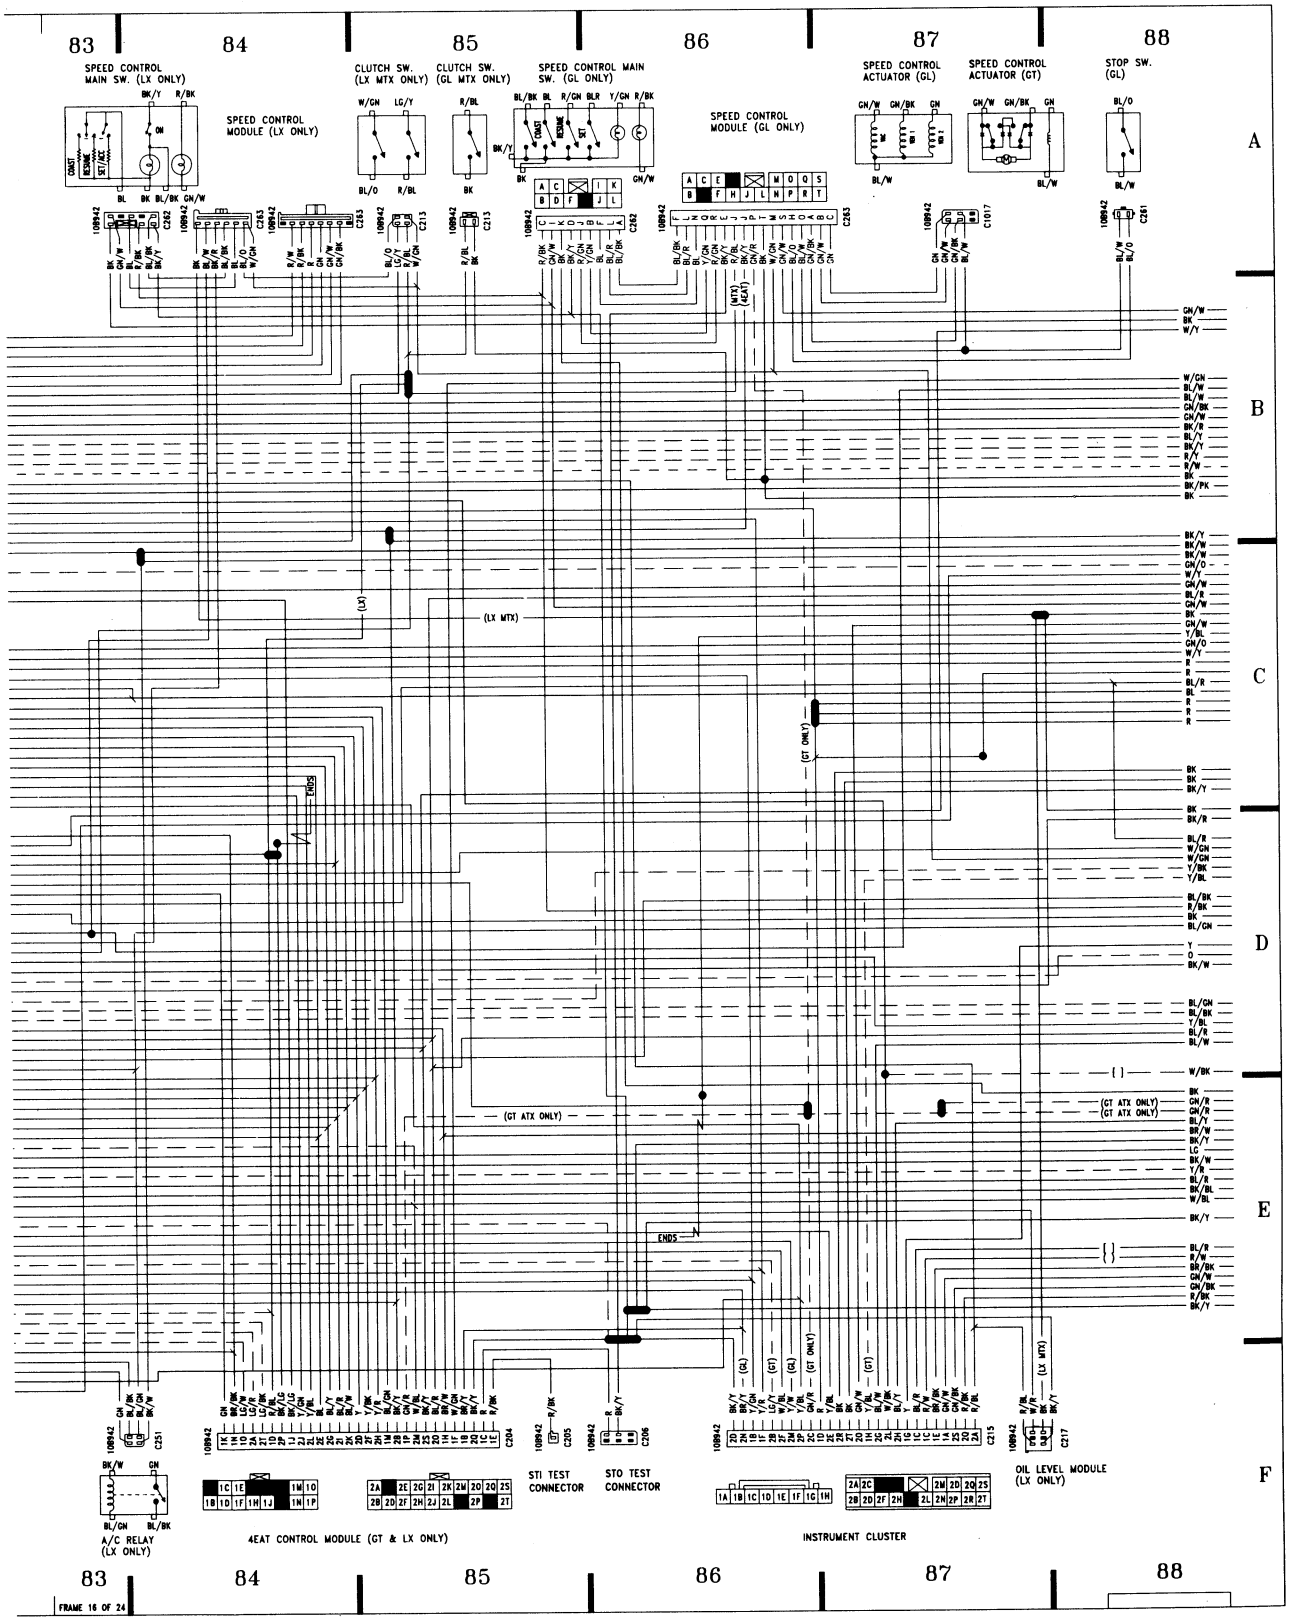
83
84
85
86
87
88
SPEED CONTROL MAIN SW. (LX ONLY)
SPEED CONTROL MODULE (LX ONLY)
CLUTCH SW. (LX MTX ONLY)
CLUTCH SW. (GL MTX ONLY)
SPEED CONTROL MAIN SW. (GL ONLY)
SPEED CONTROL MODULE (GL ONLY)
SPEED CONTROL ACTUATOR (GL)
SPEED CONTROL ACTUATOR (GT)
STOP SW. (GL)
A
B
C
D
E
F
(LX MTX)
(GT ONLY)
(GT ATX ONLY)
ENDS
A/C RELAY (LX ONLY)
4EAT CONTROL MODULE (GT & LX ONLY)
STI TEST CONNECTOR
STO TEST CONNECTOR
INSTRUMENT CLUSTER
OIL LEVEL MODULE (LX ONLY)
FRAME 16 OF 24