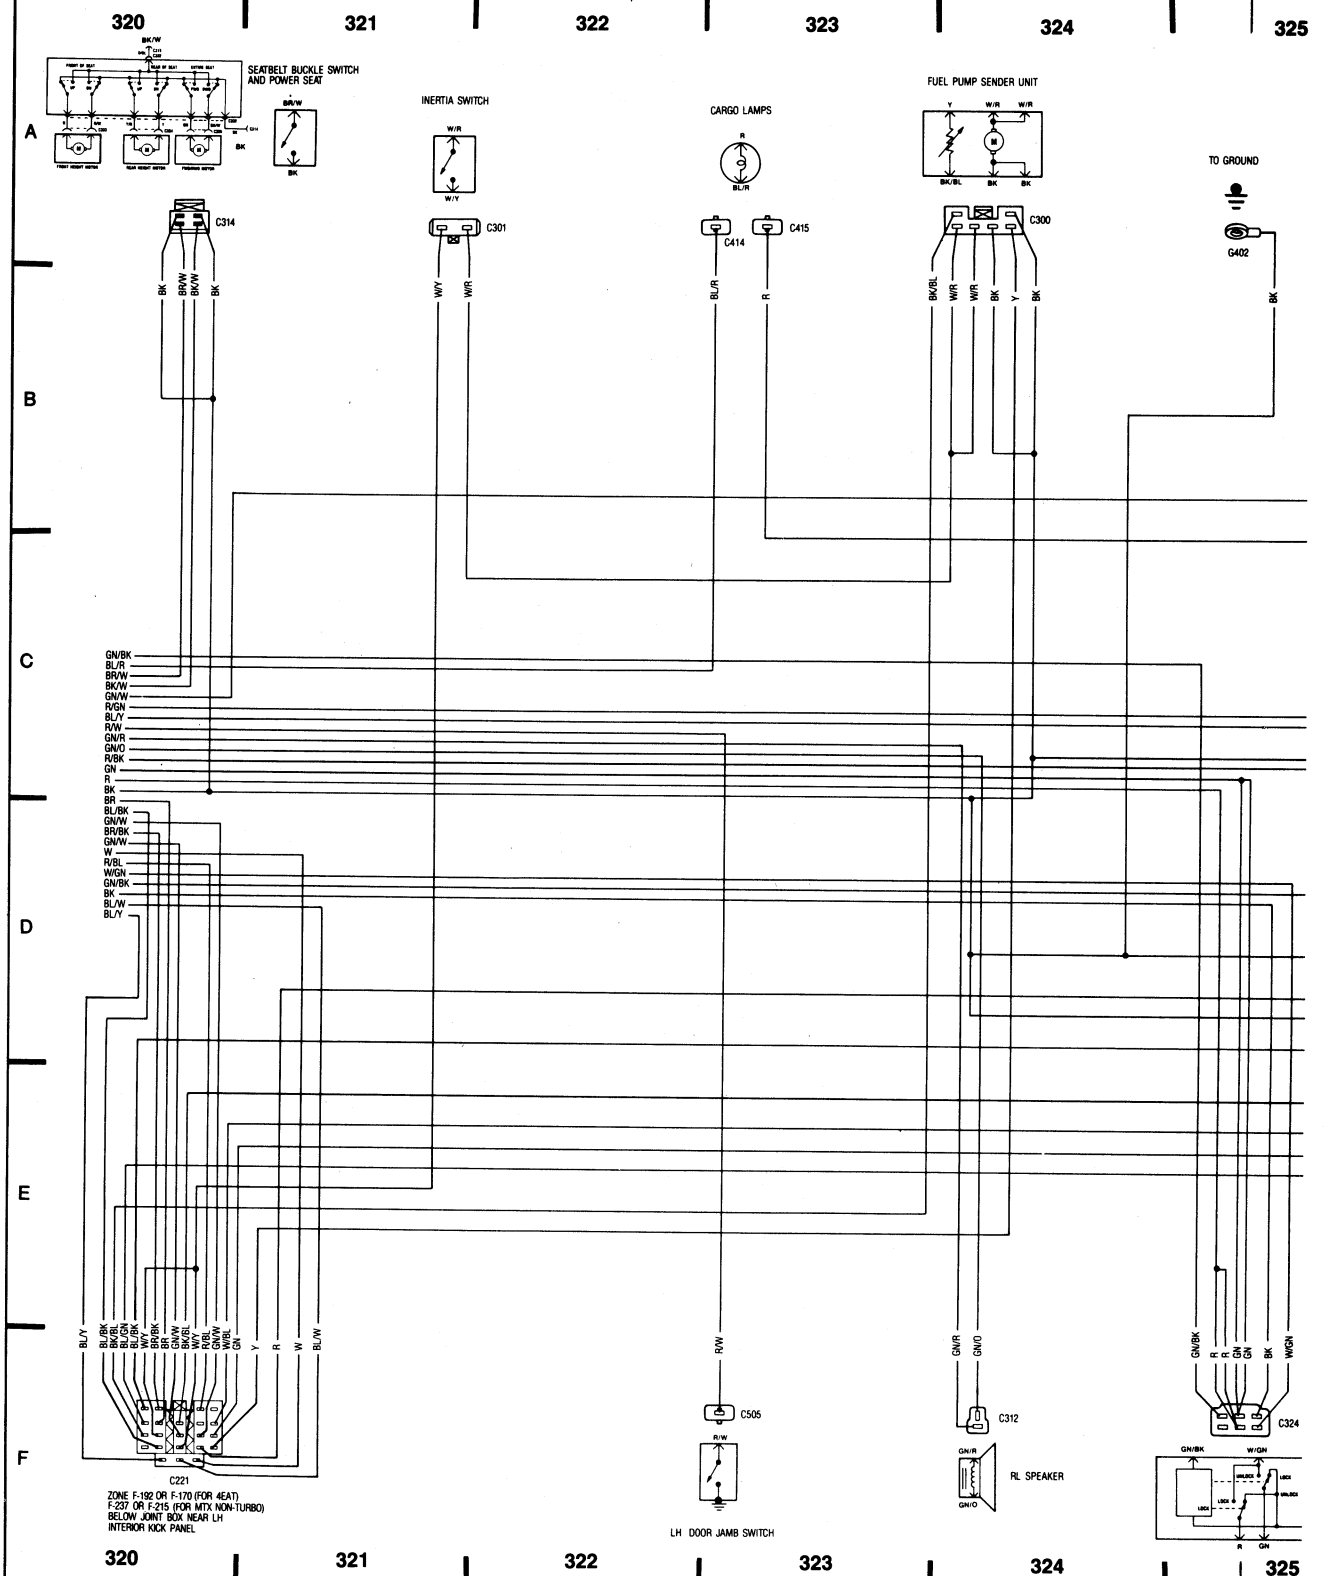
320
321
322
323
324
325
A
B
C
D
E
F
SEATBELT BUCKLE SWITCH AND POWER SEAT
INERTIA SWITCH
CARGO LAMPS
FUEL PUMP SENDER UNIT
TO GROUND
C314
C301
C414
C415
C300
G402
C221
ZONE F-192 OR F-170 (FOR 4EAT)
F-237 OR F-215 (FOR MTX NON-TURBO)
BELOW JOINT BOX NEAR LH
INTERIOR KICK PANEL
C505
LH DOOR JAMB SWITCH
C312
RL SPEAKER
C324
FRAME 59 OF 64
12136-89Z